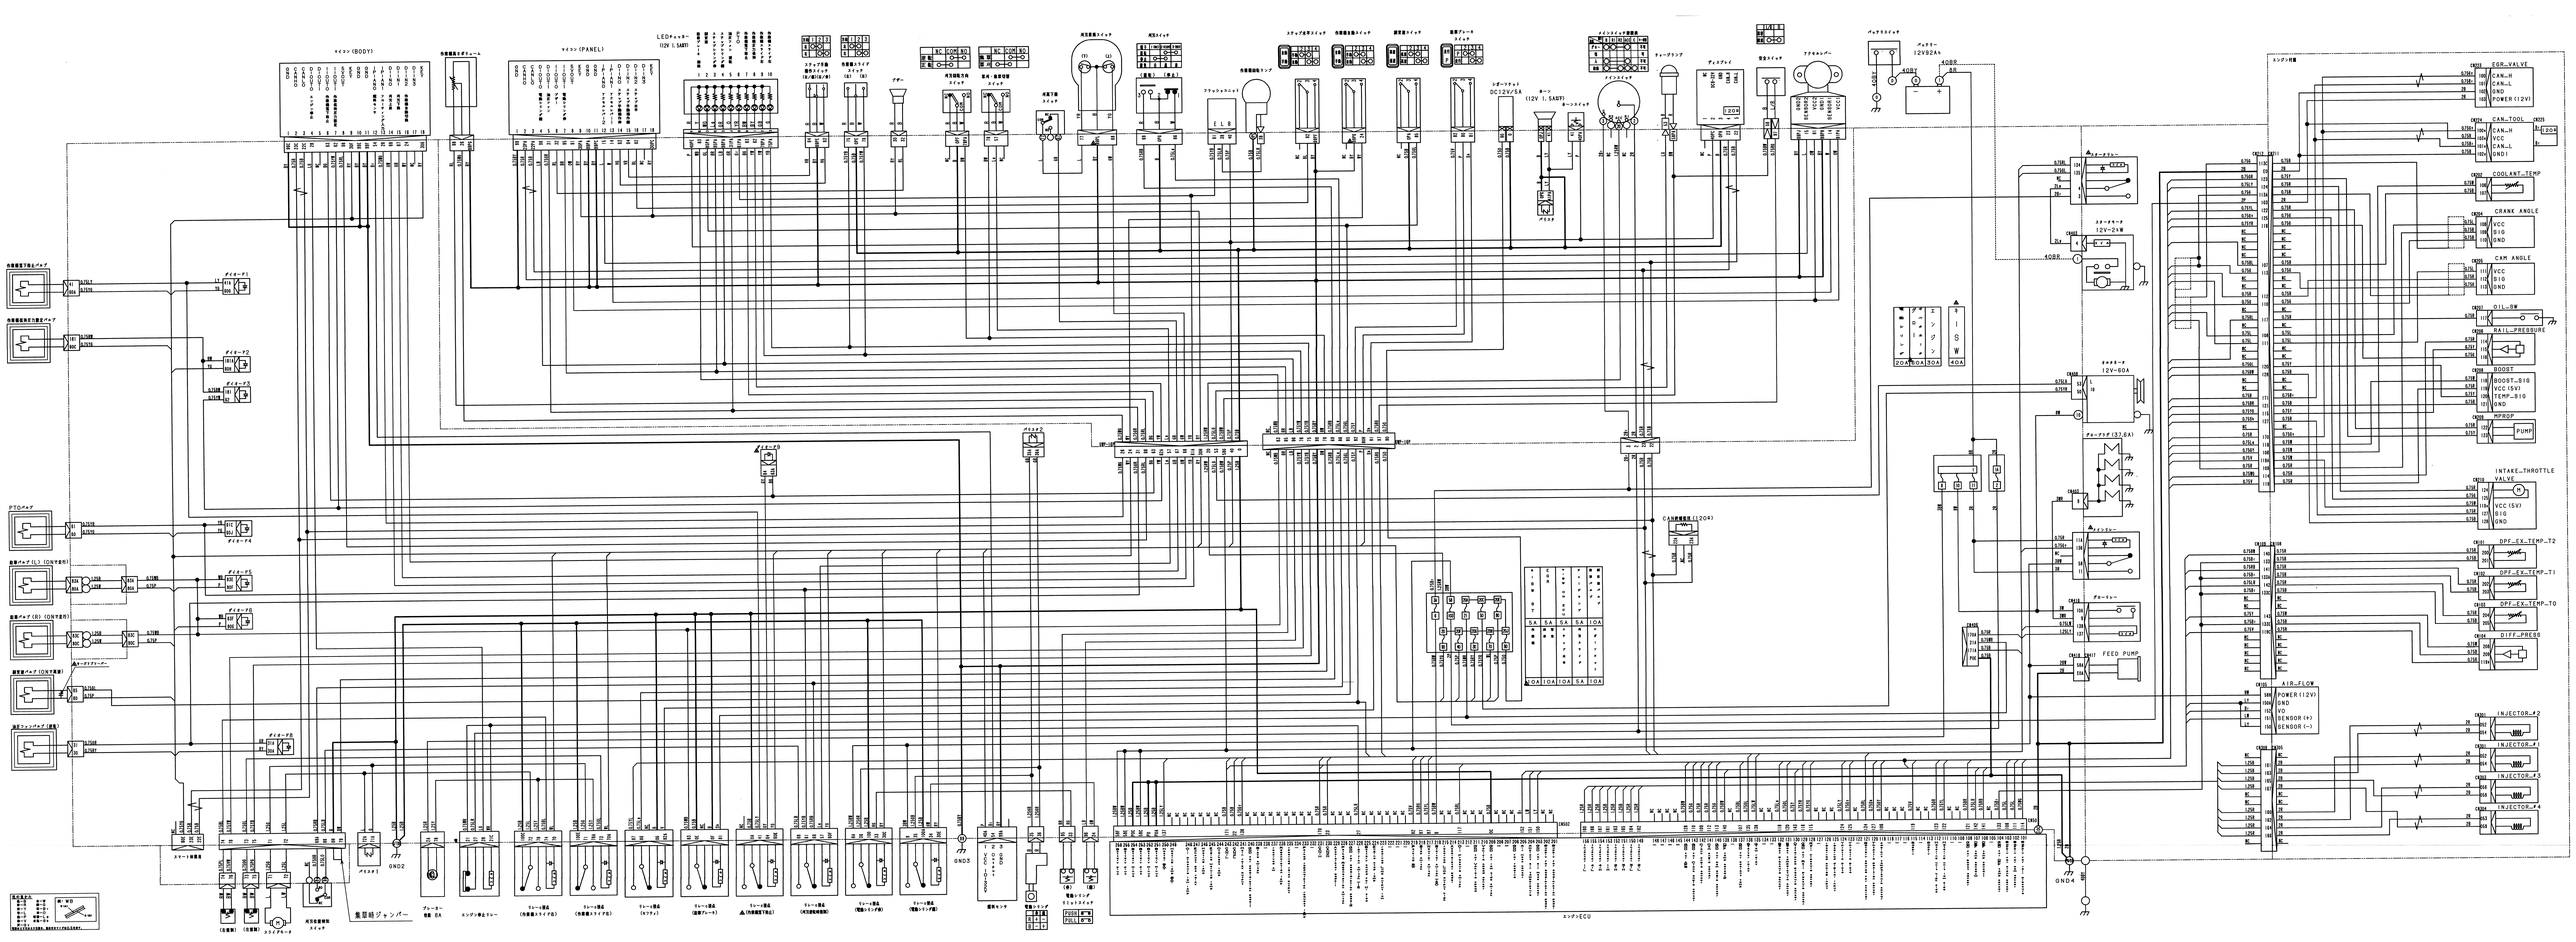

EGR_VALVE
CAN_H
CAN_L
GND
POWER (12V)
CAN_TOOL
CAN_H
VCC
CAN_L
GND1
COOLANT_TEMP
CRANK ANGLE
VCC
SIG
GND
CAM ANGLE
VCC
SIG
GND
OIL_SW
RAIL_PRESSURE
BOOST
BOOST_SIG
VCC (5V)
TEMP_SIG
GND
MPROP
PUMP
INTAKE_THROTTLE VALVE
VCC (5V)
SIG
GND
DPF_EX_TEMP_T2
DPF_EX_TEMP_T1
DPF_EX_TEMP_T0
DIFF_PRESS
AIR_FLOW
POWER (12V)
GND
VO
SENSOR (+)
SENSOR (−)
INJECTOR_#2
INJECTOR_#1
INJECTOR_#3
INJECTOR_#4
FEED PUMP
12V-60A
12V-2kW
12V-5A
DC12V/5A
12V B2A
40BR
GND2
GND3
GND4